


# Measuring Guide for Wood Cornices

## Tools and Tips

- **Steel tape measure** — do not use cloth tape
- **Pencil**
- **Round measurements** to the nearest 1/8"

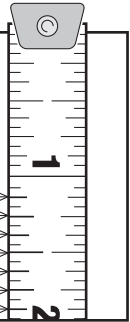

1/8"  
1/4"  
3/8"  
1/2"  
5/8"  
3/4"  
7/8"

## Choose a Mount Type: Inside Mount or Outside Mount

**Inside Mount: Full Recess** Window treatments are installed completely inside the window casing.



Full Recess  
Inside Mount Cornice

An **Inside Mount Wood Cornice** is manufactured with straight-cut edges on both ends and looks best when it is mounted flush to the window casing. The cornice width is determined by the width of the window treatment ordered.

Use the chart on the following page to determine if your window is deep enough for a Full Recess Inside Mount Cornice. No further measuring is required.

**Inside Mount: Partial Recess** Window treatments extend beyond the window casing.



Partial Recess

An **Inside Mount Wood Cornice** is manufactured with straight-cut edges on both ends. The cornice width is determined by the window treatment ordered.

Returns (side pieces) or a dust cover cannot be ordered for an Inside Mount Wood Cornice. Depending how far the cornice extends beyond the window casing, consider ordering your cornice as an Outside Mount with a special return length.

**Outside Mount:** Window treatments are installed outside the window casing.



An **Outside Mount Wood Cornice** is manufactured with standard returns (side pieces) and a dust cover automatically determined by the window treatment ordered. No further measuring is required.

If your Outside Mount Cornice requires longer returns, please specify at the time of order.

**Note:** Returns are measured and cut from the INSIDE of the miter to ensure the most accurate fit.

For an **Outside Mount Wood Cornice** ordered separately (without a blind or shade):

- 1. Measure Cornice Width:** Measure width to be covered. Maximum width is 366" (exception: Eloquence is 92 1/2")  
Make sure that you have enough space on all sides of your walls to mount your Cornice.
- 2. Measure for Clearance:** Add additional space for clearance for under treatments (i.e. drapery), mounting brackets and operating controls. **Note:** Cornice profile sizes vary by style.
- 3. Measure Cornice Return Length:** Measure the distance your cornice will extend from the mounting surface and record measurement as your special return length.

**Note:** If Wood Cornice is not being installed over a window treatment, the backside measurements of the cornice and returns will be the exact sizes ordered. No additional deductions are taken.


Follow these steps to determine if your window is deep enough for a Inside Mount Cornice:

- A. Select your product and Cornice type and locate the **FULL RECESS DEPTH** column.
- B. Measure the depth of your window casing. If the depth is less than the Full Recess Depth measurement, order Cornice as an Outside Mount. Special return lengths can be ordered for Outside Mount Cornices.

## Cornice Return Information


Product and Cornice Type	Standard Return Inside Width	Full Recess Depth
<b>Sheer Enhancement® Vertical Blinds</b>		
4½" Eloquence Wood Cornice	6¼"	7⅛"
5½" Noble Wood Cornice	6¼"	7¼"
7½" Noble Wood Cornice	6¼"	7⅞"
5½" Regal Wood Cornice	6¼"	7⅛"
7½" Regal Wood Cornice	6¼"	8¼"
<b>Other Vertical Blinds</b>		
4½" Eloquence Wood Cornice	5½"	6¼"
5½" Noble Wood Cornice	5½"	6½"
7½" Noble Wood Cornice	5½"	6⅜"
5½" Regal Wood Cornice	5½"	6⅝"
7½" Regal Wood Cornice	5½"	7½"
<b>Cellular, Pleated, Roman, Roller, Solar Shades</b>		
4½" Eloquence Wood Cornice	3¾"	4½"
5½" Noble Wood Cornice	3¾"	4¾"
7½" Noble Wood Cornice	3¾"	5⅛"
5½" Regal Wood Cornice	3¾"	5⅝"
7½" Regal Wood Cornice	3¾"	5¾"
<b>Natural Shades</b>		
4½" Eloquence Wood Cornice	3⅝"	4⅜"
5½" Noble Wood Cornice	3⅝"	4⅝"
7½" Noble Wood Cornice	3⅝"	4⅝"
5½" Regal Wood Cornice	3⅝"	5⅛"
7½" Regal Wood Cornice	3⅝"	5⅝"
<b>VertiCell™</b>		
4½" Eloquence Wood Cornice	3⅜"	4⅞"
5½" Noble Wood Cornice	3⅜"	4⅞"
7½" Noble Wood Cornice	3⅜"	4⅞"
5½" Regal Wood Cornice	3⅜"	4⅞"
7½" Regal Wood Cornice	3⅜"	5⅞"
<b>2" Horizontal Blinds (Wood, Faux Wood, Composite, Aluminum)</b>		
4½" Eloquence Wood Cornice	5"	5¾"
5½" Noble Wood Cornice	5"	5⅝"
7½" Noble Wood Cornice	5"	6⅝"
5½" Regal Wood Cornice	5"	6⅞"
7½" Regal Wood Cornice	5"	7"
<b>2 3/8" &amp; 2 1/2" Horizontal Blinds (Wood, Faux Wood, Composite)</b>		
4½" Eloquence Wood Cornice	5"	5¾"
5½" Noble Wood Cornice	5"	5⅝"
7½" Noble Wood Cornice	5"	6⅝"
5½" Regal Wood Cornice	5"	6⅞"
7½" Regal Wood Cornice	5"	7"
<b>Sliding Panels</b>		
4½" Eloquence Wood Cornice	5"	5¾"
5½" Noble Wood Cornice	5"	5⅝"
7½" Noble Wood Cornice	5"	6⅝"
5½" Regal Wood Cornice	5"	6⅞"
7½" Regal Wood Cornice	5"	7"

Regal Wood – Outside Mount

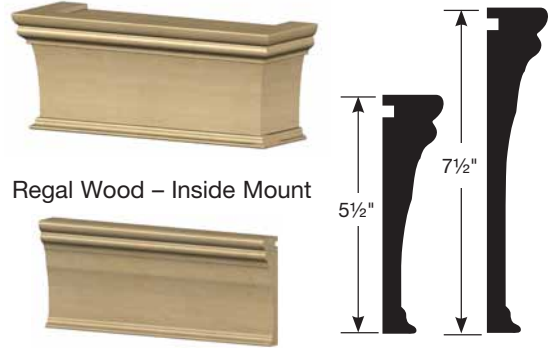

Regal Wood – Inside Mount

Noble Wood – Outside Mount

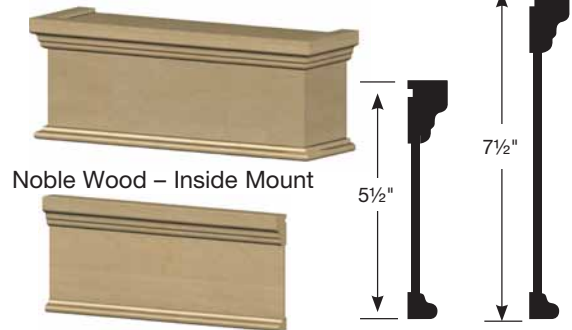

Noble Wood – Inside Mount

Eloquence Wood – Outside Mount



Eloquence Wood – Inside Mount

**Note:** Minimum return length is ½"; maximum return length is 8".

If the cornice is to be used alone (no product type selected), the return length must be specified at the time of the order.