


Measuring Guide for Custom Cornices

Tools and Tips

- Steel tape measure — do not use cloth tape
- Pencil
- Round measurements to the nearest 1/8"

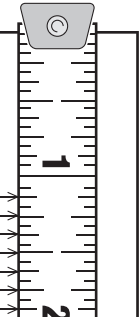

Choose a Mount Type: Inside Mount or Outside Mount

Inside Mount

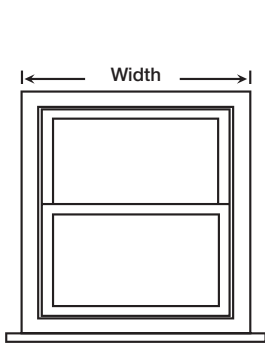 


Figure 1

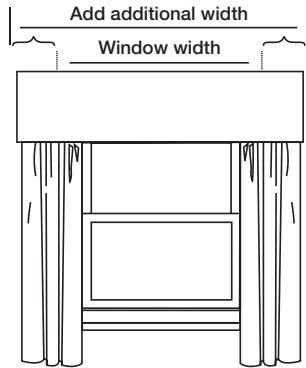 


Figure 2


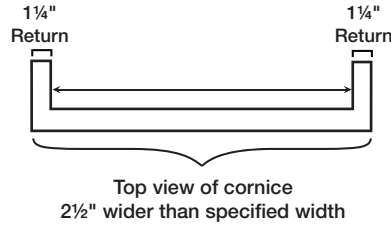 



Figure 3

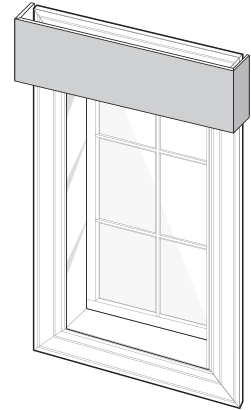 

- 1 Measure window width including molding. Maximum available width is 168" (figure 1).
- 2 Add any additional width desired, especially if hanging curtain panels or sheers under cornice. Round up to nearest full inch (figure 2).
- 3 Cornice returns measure 1 1/4" on each side. Finished front dimension of cornice will measure 2 1/2" wider than your specified width (figure 3). Please take this into consideration if you have two windows close to each other or windows in a corner.

Outside Mount

 - 1 Measure the exact width of the window opening at the very top of the casing.
- 2 Measure the exact width of the window opening either 8" or 12" from top, depending on the desired drop of cornices being ordered.
- 3 Measure twice and document the smaller dimension, as not all window openings are perfectly square.

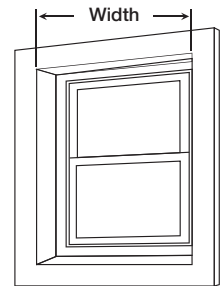

Installation Brackets

| Finished Width | Number of brackets |
|------------------|--------------------|
| 20" – 40" | 2 |
| 40 1/16" – 76" | 3 |
| 76 1/16" – 112" | 4 |
| 112 1/16" – 148" | 5 |
| 148 1/16" – 168" | 6 |