
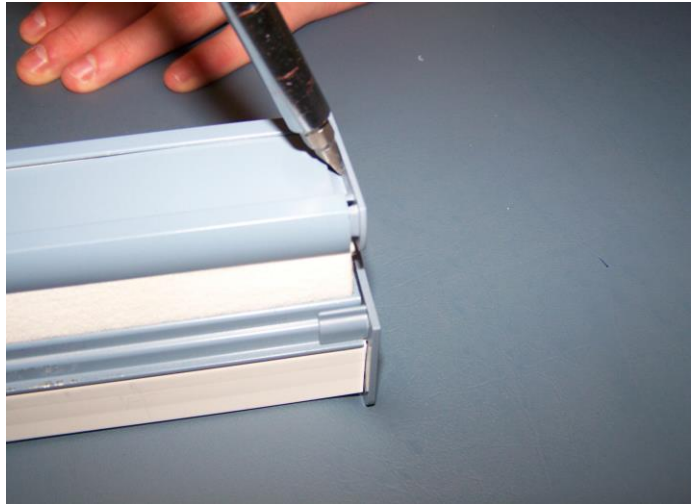


| | | |
|--|---|--|
| <p style="text-align: center;"> SPRINGS WINDOW FASHIONS <small>the Best Experience Company</small>  Springs Window Fashions Customer Service </p> | Title: | Use If/When: |
| | Cellular and Pleated Cordless – Creeping Down When Shade is Raised | Cordless Cellular or Pleated shade is not staying in the raised position |
| Last Revised: 07/09/2015 | | |


1. Raise shade fully. Remove shade from installation brackets using a wide flathead screwdriver or **paint scraper**. Insert tip of screwdriver or scraper between the back of the headrail and the bracket.




2. Turn shade upside down on a flat surface. Remove one end cap off the bottom rail.




3. Slide aluminum slat from bottom rail.

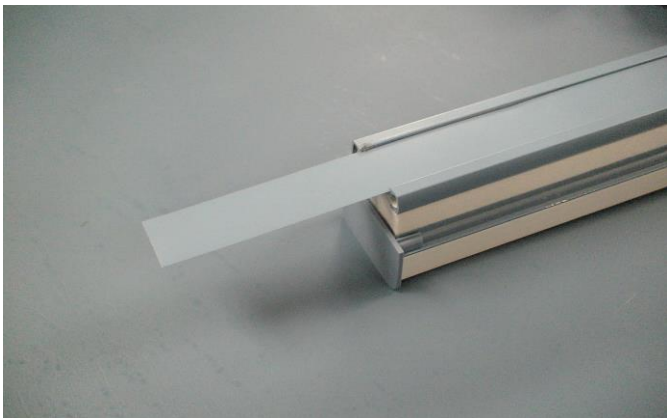


4. Remove bottom weights one at a time starting with center weight. Remove additional weights if needed.

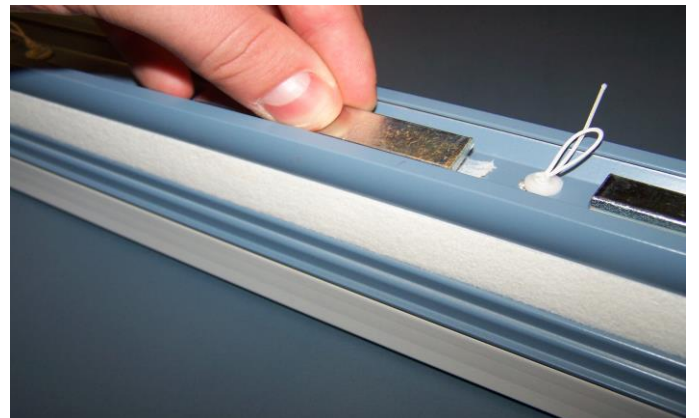

| | | |
|--|---|--|
| <p style="text-align: center;"> SPRINGS WINDOW FASHIONS <small>the Best Experience Company</small>  </p> <p style="text-align: center;"> Springs Window Fashions Customer Service </p> | Title: | Use If/When: |
| | Cellular and Pleated Cordless – Creeping Down When Shade is Raised | Cordless Cellular or Pleated shade is not staying in the raised position |
| Last Revised: 07/09/2015 | | |

5. Replace aluminum slat and end cap.

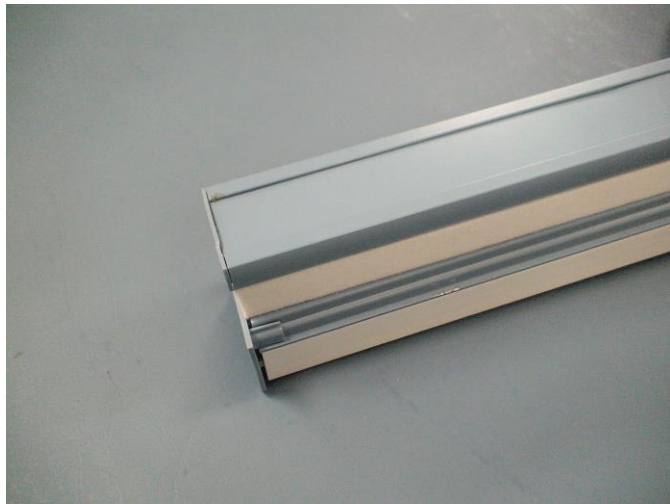

6. Reinstall shade back into brackets by attaching front of shade to the front of the brackets and pushing back on shade until it snaps into place.

