

TASK: Traverse Rod Adjust Carriers for Even Stack

Use If/When: Overlap and underlap carriers do not meet in the middle of the rod or 1 side does not stack completely.

Tools Needed: N/A

1. Follow these instructions if the traverse rod appears (a) off center when closed or (b) only one side of the rod stacks when opened?

(a)




(b)



2. Remove the traverse rod from the mounting brackets. Be sure to keep the rod extended to the desired width for your window application. Position the rod with the back side facing up on a flat surface.



3. Pull the control loop until the master carrier stacks to the outside as far as it will go.

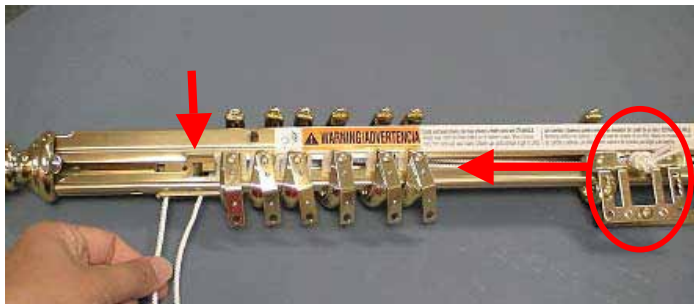


When this step is complete, the master carrier will rest with the slides.



4. While holding the control loop firmly, pull the master carrier toward the end of the rod. The master carrier may pull hard because the cording is sliding through the tabs.

Note: For larger traverse rods, you may need assistance with this step.

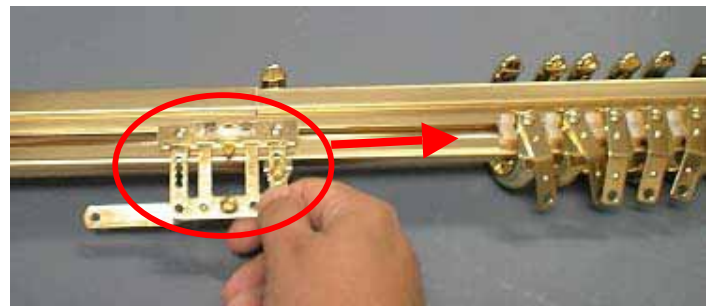

When this step is complete, the master carrier will rest with the slides.



TASK: Traverse Rod Adjust Carriers for Even Stack

Use If/When: Overlap and underlap carriers do not meet in the middle of the rod or 1 side does not stack completely.

Tools Needed: N/A

5. Install traverse rod into the mounting brackets. Operate the traverse rod to insure that the carriers meet in the center of the rod and both sides stack evenly.



6. If carriers do not meet in the center or stack evenly to the side, repeat process.