

TASK: Correct Uneven Cordless Roman Shades

Use If/When: Cordless shade does not hang or operate evenly.

Tools Needed: Carpenter's Level, Measuring Tape

1. Use a carpenter's level to make sure the brackets, window and mounting surface are level.



2. Lower shade completely. Measure length of the bottom panel on both sides to confirm the fabric was rolled onto the sill rail evenly. If uneven, go to step 3. If even, skip to step 6.



3. Remove clear sill rail cover.



4. Carefully unroll the fabric from the sill rail. Reroll the fabric keeping taut and parallel with the pleat above. Check bottom pleat for evenness by measuring again. Replace sill rail cover.




TASK: Correct Uneven Cordless Roman Shades

Use If/When: Cordless shade does not hang or operate evenly.

Tools Needed: Carpenter's Level, Measuring Tape

5. Ensure all cord clips on the back of material are in alignment. If necessary, slide the cord clips horizontally so all are aligned with the headrail.

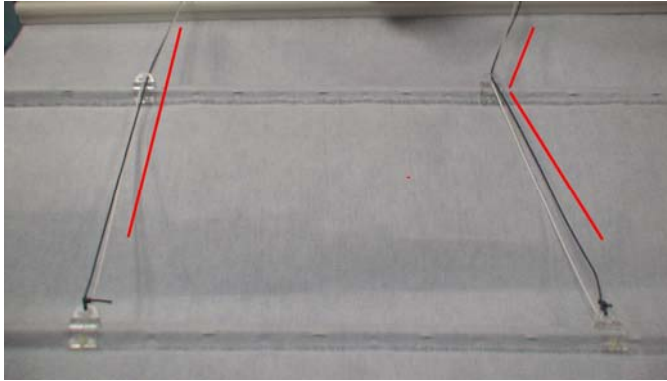

6. Locate the cord on the side of the shade that is lower. Retie knot in cord so the shade is even in length.



7. Raise and lower the shade several times to ensure proper operation.

