



# Measuring Guide for Bali Essentials Roller and Solar Shades

## Inside Mount

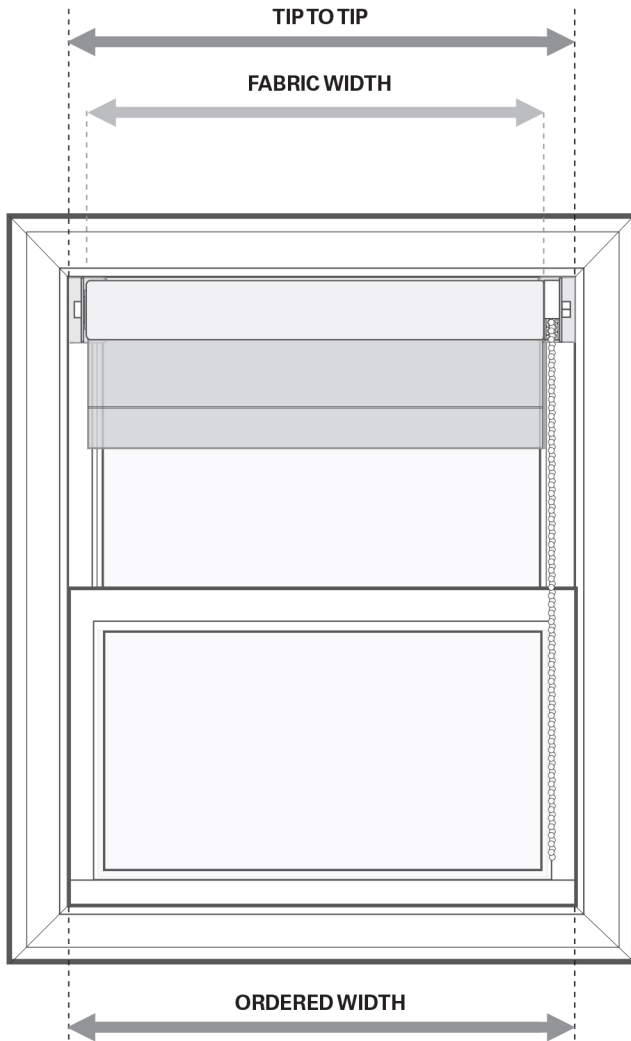

## Outside Mount

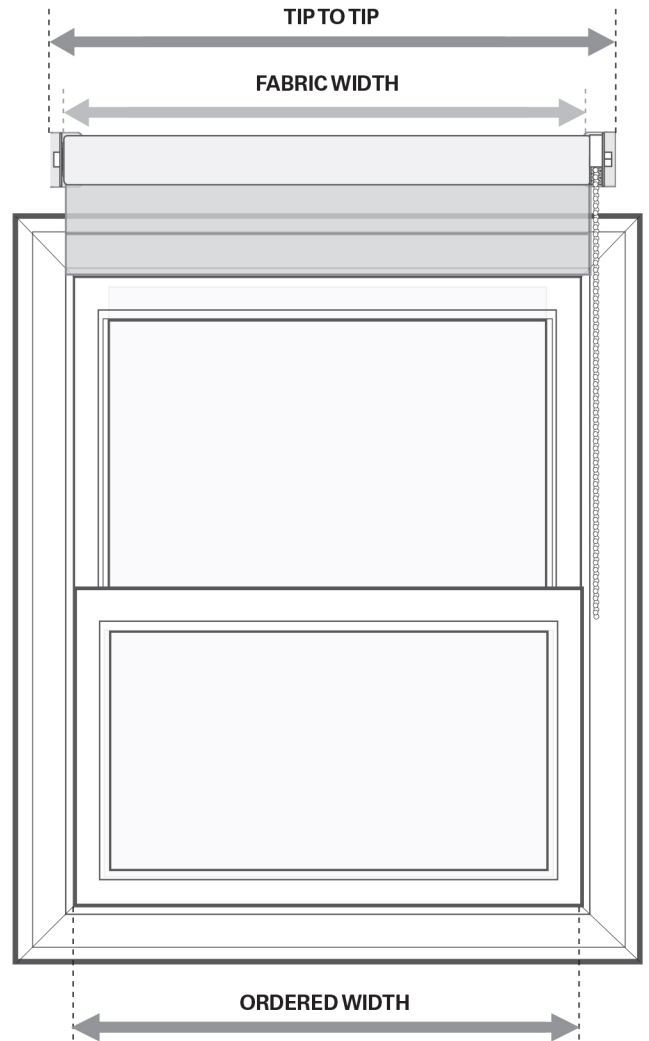

### Tip:

When ordering Bali Essentials roller/solar shades, your Ordered Width is the inside width of your window. It doesn't matter if you are ordering inside or outside mount. We will take the appropriate measures for your blind to fit inside or outside the window correctly. If you desire more overlap on outside mounted blinds, please add 1" to 2" to your inside window width measurement (ordered width). This will give you a ½" to 1" fabric overlap on each side of your window.