


TASK: Reattaching Cord Release Device on Cellular/Pleated/Roman BUTD, Cellular/Pleated SUSD and Combination Shades

Use If/When: Cord Release Device on Intermediate Rail has come apart.

Tools Needed: No tools needed

1. Untwist all cords.

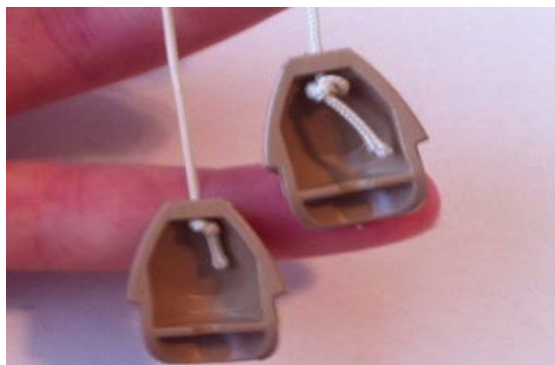

2. Position the danskord knot from the bottom half of the cord release device into one half of the top section (Note: If this step is missed, cord release device will come apart when operated).



3. Take the matching top section half and position it over the half with the danskord knot.



4. Slide the bottom half of the cord release device over the top sections until it snaps in place.

