

TASK: Cord Tilter Replacement with Wand Tilter – 2" or greater Horizontal Blinds

Use If/When: Replace cord tilter with wand tilter.

Tools Needed: Screwdriver, Rubber Mallet, Needle-nose Pliers

1. Remove the valance from the mounting clips. Tilt the slats horizontally. Lift and lock the slats in the raised position with approximately 1" of space between top slat and underside of the headrail.




2. Remove the blind from the mounting brackets.



Or



3. Remove the cord tassels and washers from the tilter cords and set aside.

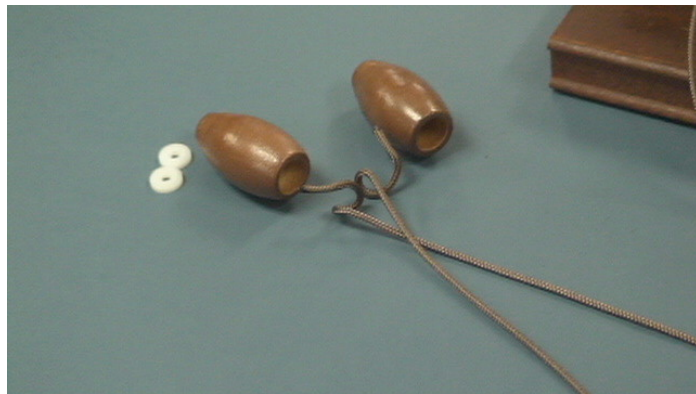

4. Remove the blind's end caps by gently tapping with a screwdriver or rubber mallet.



Or remove the blind's end stiffeners with needle-nose pliers.




TASK: Cord Tilter Replacement with Wand Tilter – 2" or greater Horizontal Blinds


Use If/When: Replace cord tilter with wand tilter.

Tools Needed: Screwdriver, Rubber Mallet, Needle-nose Pliers


5. Slide the tilt rod out the opposite end of the tilter until it is free of the tilter.

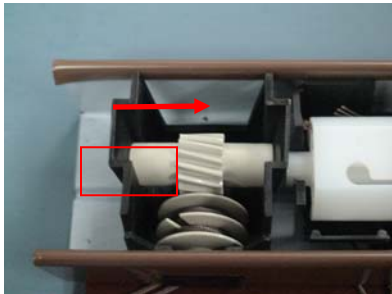


Or

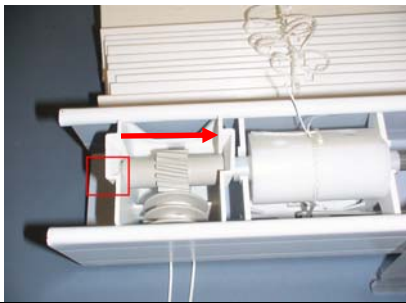

6. Gently spread sides of the headrail and pull the tilter up and out.

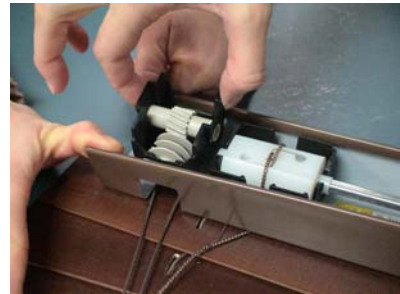

Or

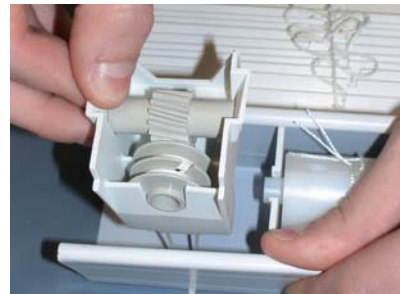


7. Place the new wand tilter into the rail, guiding the stem through the cut out. Push down firmly on the back side until the tilter is in position.



Or




8. Slide the tilt rod through the wand tilter. Be sure the tape drums are in the open position before inserting rod.

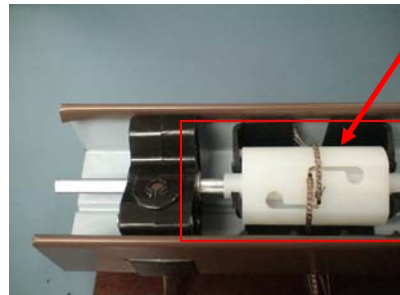

Tape Drum

Or

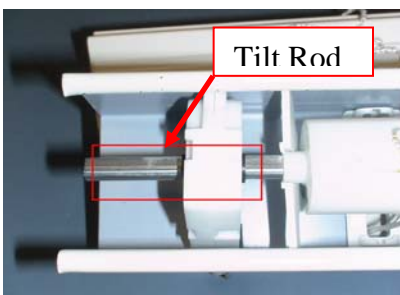

Tilt Rod

TASK: Cord Tilter Replacement with Wand Tilter – 2" or greater Horizontal Blinds

Use If/When: Replace cord tilter with wand tilter.

Tools Needed: Screwdriver, Rubber Mallet, Needle-nose Pliers

9. Replace the end caps. Use rubber mallet if necessary to ensure a tight fit.



Or replace the end stiffeners.



USE STEPS 10-12 FOR WAND CONNECTOR CLIP ONLY.

10. To connect the wand with a connector clip, pull the end of the connector through the hole on the wand.



11. Locate the hole at the top of the long groove on the tilter stem and insert the wand connector clip.



12. Push the wand connector clip down and to the side of the tilter stem. Snap wand connector clip down onto the short groove side of the tilter stem.




TASK: Cord Tilter Replacement with Wand Tilter – 2" or greater Horizontal Blinds

Use If/When: Replace cord tilter with wand tilter.

Tools Needed: Screwdriver, Rubber Mallet, Needle-nose Pliers

USE STEP 13 FOR WAND WITH SHEPHERDS HOOK ONLY.

- 13.** To connect a wand with a shepherds hook, insert the open end of the hook into the hole at the bottom of the wand tilter stem.

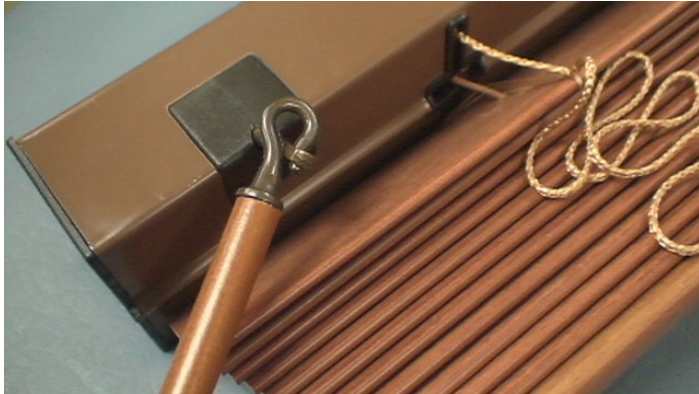

USE STEP 14 FOR WAND WITH PLASTIC SLEEVE ONLY.

- 14.** Raise the plastic sleeve on the tilter stem. Connect the wand to the metal hook. When wand is connected, push sleeve down.



- 15.** Turn wand to ensure the slats tilt correctly.



- 16.** Reinstall blind in brackets.
Reinstall valance in clips.

