

## TASK: Wand Tilter Replacement with Wand Attachment – 2" or greater Horizontal Blinds

**Use If/When:** Replace wand tilter with wand attachment.

**Tools Needed:** Screwdriver, Rubber Mallet, Needle-nose Pliers

1. Remove valance from the valance clips. Tilt the slats horizontally. Lift and lock the slats in the raised position leaving approximately 1" of space between top slat and underside of the headrail.



2. Remove the blind from the mounting brackets.



Or




3. Remove wand. If blind has a wand with a connector clip, use needle nose pliers to grasp wand connector clip below the tilter stem. Twist wire to disengage from the grooves in the tilter system.




If the blind has a shepherds hook, slide hook from stem.



If the blind has a plastic stem, raise plastic sleeve, and remove wand from metal hook.

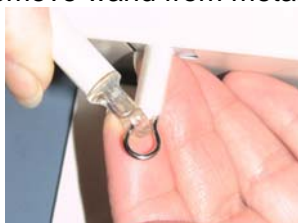

4. Remove the blind's end caps by gently tapping with a screwdriver or rubber mallet or pliers (as shown).

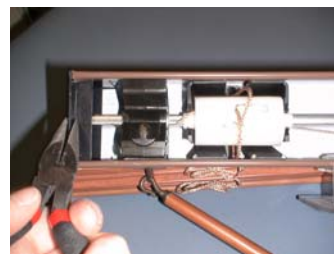

Or remove the blind's end stiffeners with needle-nose pliers.



## TASK: Wand Tilter Replacement with Wand Attachment – 2" or greater Horizontal Blinds


**Use If/When:** Replace wand tilter with wand attachment.

**Tools Needed:** Screwdriver, Rubber Mallet, Needle-nose Pliers

5. Slide the tilt rod out the opposite end of the tilter until it is free of the tilter.




Or

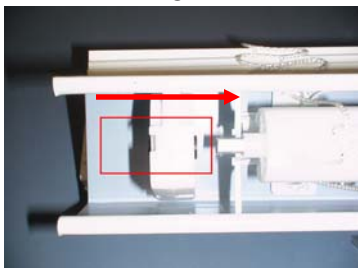

6. Gently spread sides of the headrail and pull the tilter up and out.



Or

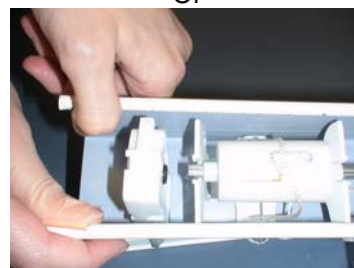


7. Place the new wand tilter into the rail, guiding the stem through the cut out. Push down firmly on the back side until the tilter is in position.




Or



8. Slide tilt rod back into the tilter. Be sure tape drums are in the open position before inserting rod.

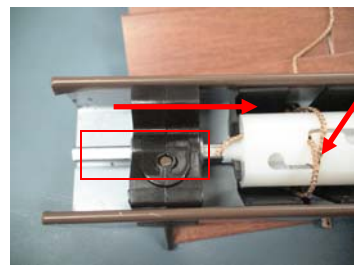

Or

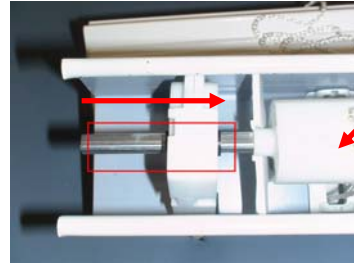

## TASK: Wand Tilter Replacement with Wand Attachment – 2" or greater Horizontal Blinds

Use If/When: Replace wand tilter with wand attachment.

Tools Needed: Screwdriver, Rubber Mallet, Needle-nose Pliers

9. Replace the end caps. Use rubber mallet if necessary to ensure a tight fit.



Or replace the end stiffeners.



**USE STEPS 10-12 FOR WAND CONNECTOR CLIP ONLY.**

10. To connect the wand with a connector clip, pull the end of the connector through the hole on the wand.



11. Locate the hole at the top of the long groove on the tilter stem and insert the wand connector clip.



12. Push the wand connector clip down and to the side of the tilter stem. Snap wand connector clip down onto the short groove side of the tilter stem.



## TASK: Wand Tilter Replacement with Wand Attachment – 2" or greater Horizontal Blinds

**Use If/When:** Replace wand tilter with wand attachment.

**Tools Needed:** Screwdriver, Rubber Mallet, Needle-nose Pliers

### USE STEP 13 FOR WAND WITH SHEPHERDS HOOK ONLY.

- 13.** To connect a wand with a shepherds hook, insert the open end of the hook into the hole at the bottom of the wand tilter stem.



### USE STEP 14 FOR WAND WITH PLASTIC SLEEVE ONLY.

- 14.** Raise the plastic sleeve on the tilter stem. Connect the wand to the metal hook. When wand is connected, push sleeve down.



- 15.** Turn wand to ensure the slats tilt correctly.



- 16.** Reinstall blind in brackets.  
Reinstall valance in clips.

