


<p style="text-align: center;"> SPRINGS WINDOW FASHIONS <small>the Best Experience Company</small>  Springs Window Fashions Customer Service </p>	<p style="text-align: center;">Title:</p>	<p style="text-align: center;">Use If/When:</p>
<p style="text-align: center;">Last Revised: 1/7/11</p>	<p style="text-align: center;">Cellular and Pleated Adjust Fabric Placement</p>	<p style="text-align: center;">The fabric has shifted on a single or multi Cellular or Pleated Standard Cord shade</p>

1. To adjust material at top of shade:
Remove shade from installation brackets using a flathead screwdriver. Insert tip of screwdriver between the back of the headrail and the bracket.




2. Remove screw in top of headrail.




3. Once you have removed the screw, you are then able to adjust the fabric by sliding it back and forth (or until multi shade gap is at the desired width).



4. Once the gap has been adjusted, replace screw into the top of the headrail.

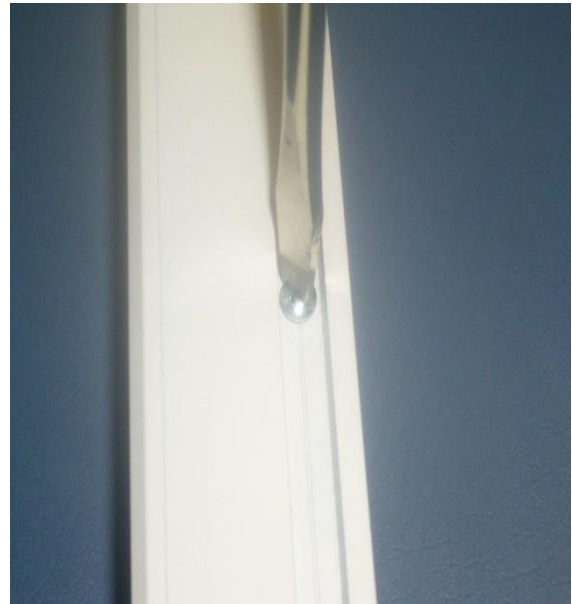


<p style="text-align: center;"> SPRINGS WINDOW FASHIONS <small>the Best Experience Company</small>  </p> <p style="text-align: center;"> Springs Window Fashions Customer Service </p>	<p style="text-align: center;">Title:</p>	<p style="text-align: center;">Use If/When:</p>
<p style="text-align: center;">Last Revised: 1/7/11</p>	<p style="text-align: center;">Cellular and Pleated Adjust Fabric Placement</p>	<p style="text-align: center;">The fabric has shifted on a single or multi Cellular or Pleated Standard Cord shade</p>

5. Replace shade into the brackets by attaching front of the shade to the front of the brackets and pushing back on the shade until it snaps into place.



6. To adjust material at bottom of shade:
Packing or shipping could cause the fabric to shift in the bottomrail.

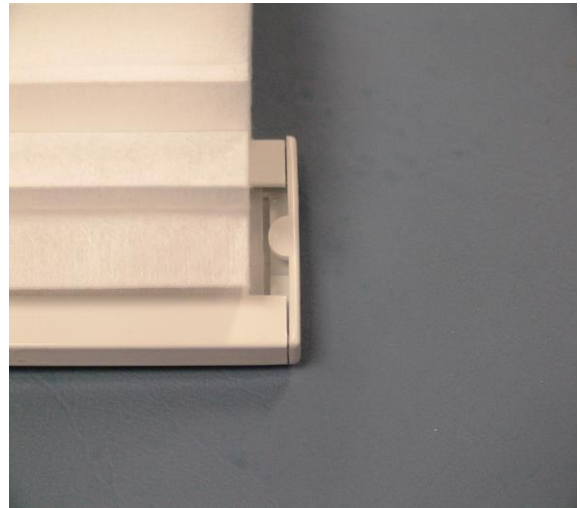

7. Move the bottomrail back and forth to adjust the fabric into the proper position.

Note: It may be easier to adjust the fabric if one of the bottomrail end caps is removed.

