


TASK: Correct Bowing Bottomrail of Cordless Cellular or Pleated Shades

Use If/When: Bottomrail is bowing (frowning).

Tools Needed: NA


Example: Bottomrail bowing when in the raised position.

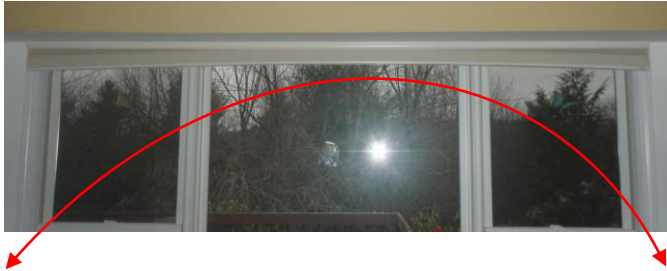

1. Two handles are required on all shades 36" in width and greater (Shades prior to 2015, BUTD, SUSD and Combo will always use two handles regardless of size). If two handles are not being used, add the additional handle to the shade.



2. Position handles toward the end of the bottomrail as far as you can comfortably reach. Raise and lower shade slowly to vent air in the cells.

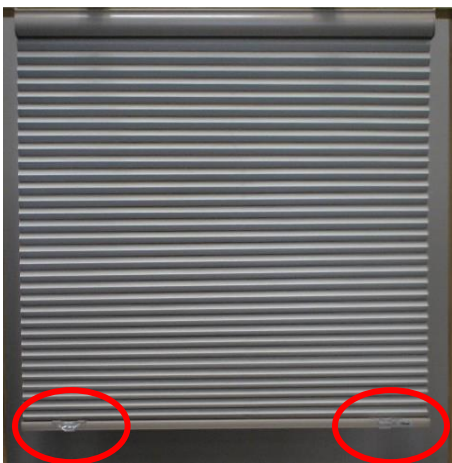

3. If bottomrail is still bowing, operate shade about half way, readjust hand position and continue to raise.



Note: Air is trapped within the cells and when raised is forced out the open ends. If raised too fast, displacing this air generates resistance that prevents the ends from stacking tight and giving the bowing appearance to the bottomrail.