

TASK: Louvers are Hard To or Won't Rotate for G71 Supervue/Everglide and G85 Duravue/Duralite Vertical headrails

Use If/When: Louvers are hard to or won't rotate for G71 Supervue/Everglide and G85 Duravue/Duralite Vertical headrails.

Tools Needed: Flat head screwdriver


1. If louvers were installed improperly, they won't turn when the rotation chain is pulled. Remove louvers by sliding a hard plastic card between the louver and the long side of the louver stem. Push card and louver up toward the top of the louver stem. This will unseat the louver from the stem.



2. Remove louver by pulling down on both the louver and the plastic card at the same time. Lay louver on a clean flat surface. Repeat for all louvers.
Note: If using a credit card, be careful not to damage the magnetic strip.



3. Rotate louver stems by pulling rotation chain. If stems are rotating, turn them to the open position. Proceed to step 7. If stems are not rotating, go to step 4.

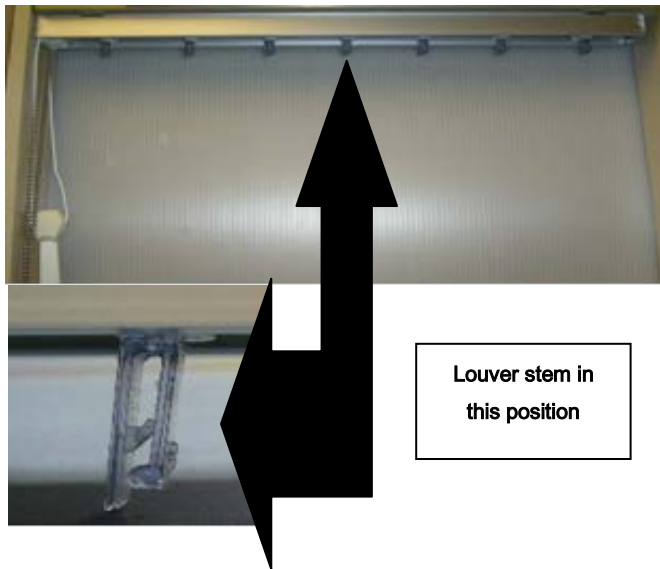

4. Remove headrail from mounting brackets by placing the flat head of a screwdriver between the back of the headrail and the release clip on the mounting clip. Pull the handle of the screwdriver toward the front of the rail and tilt the back of the headrail down and toward you.




TASK: Louvers are Hard To or Won't Rotate for G71 Supervue/Everglide and G85 Duravue/Duralite Vertical headrails


Use If/When: Louvers are hard to or won't rotate for G71 Supervue/Everglide and G85 Duravue/Duralite Vertical headrails.

Tools Needed: Flat head screwdriver

5. Lay the headrail on a flat surface with the louver stems pointed toward the ceiling. The pinion rod may not be fully seated into the control mechanism. Slightly turn the pinion rod while pushing it into the center of the control mechanism.

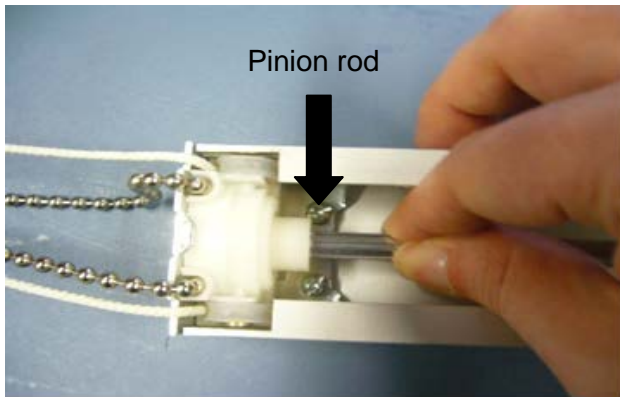

6. To ensure the louvers will rotate correctly, pull the rotation chain several times to turn the stems back and forth, then slide the carriers across the blind by pulling the traverse cord several times. This will assure the cords are moving freely.

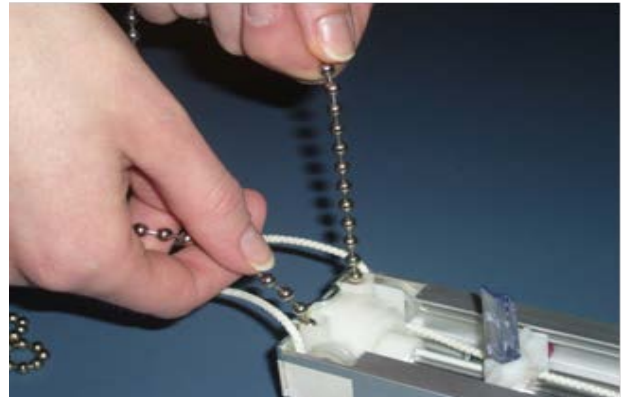

7. Once you have confirmed that the headrail is operating properly, reinstall the headrail into the mounting clips and rehang the louvers with the stems in the open position. All louvers should be facing the same direction.

