


TASK: Replace Louver Stems for G98 Magnum/UltraVue Vertical Headrail

Use If/When: Replace louver stems for G98 Magnum/Ultravue Vertical headrail


Tools Needed: Flat head screwdriver, needle nose pliers, scissors

1. A gear should be replaced with each louver stem that's replaced.

Note: The lead carrier stem cannot be replaced.

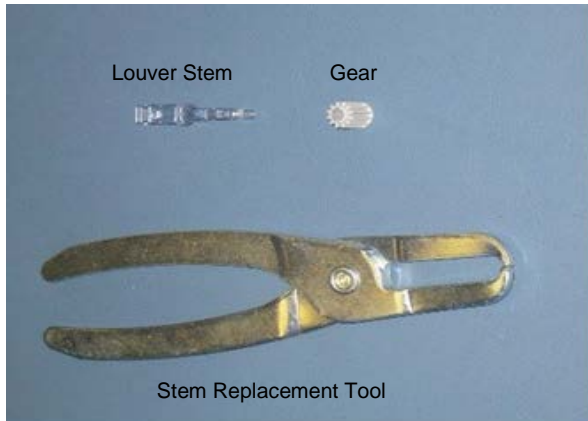

2. Locate the clear plastic louver stem where louvers are attached.

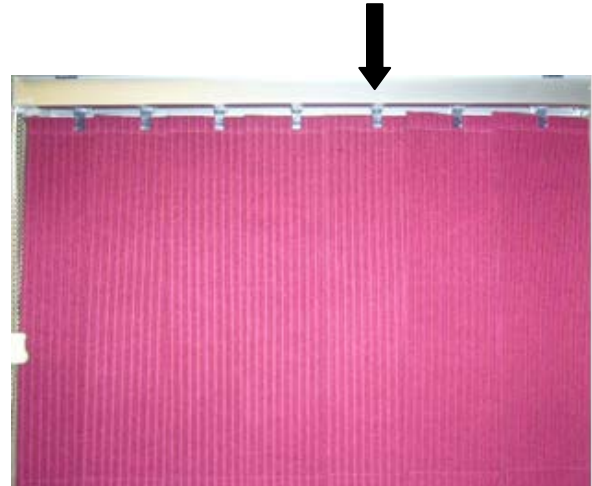

3. Rotate the louvers open. Slide a hard plastic card between the louver and the long side of the louver stem. Push the card and louver up toward the top of the louver stem. This will unseat the louver from the louver stem.



4. Remove the louver by pulling down on both the louver and the plastic card at the same time. Lay the louver on a clean, flat surface. Repeat for all louvers.

Note: If using a credit card, be careful not to damage the magnetic strip.



TASK: Replace Louver Stems for G98 Magnum/UltraVue Vertical Headrail

Use If/When: Replace louver stems for G98 Magnum/Ultravue Vertical headrail

Tools Needed: Flat head screwdriver, needle nose pliers, scissors


5. Remove the headrail from the mounting brackets by placing a flat head screwdriver between the back of the headrail and the release clip on the mounting clip. Pull the handle of the screwdriver toward the front of the headrail and tilt the back of the headrail down and toward you.




6. Lay the headrail on a clean flat surface with the louver stems pointed toward the ceiling.



7. Insert stem replacement tool under the gear. Squeeze to release the louver stem.

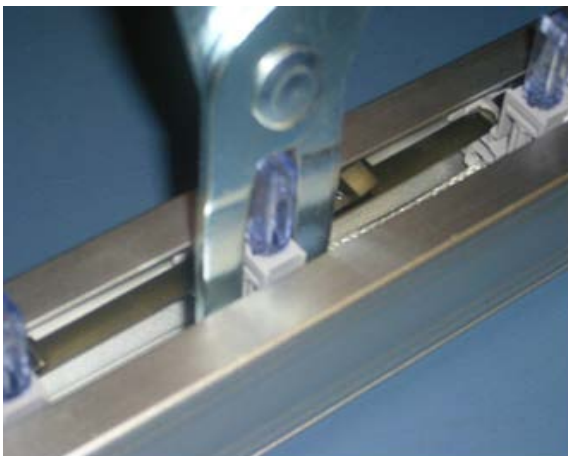

8. Remove the louver stem.

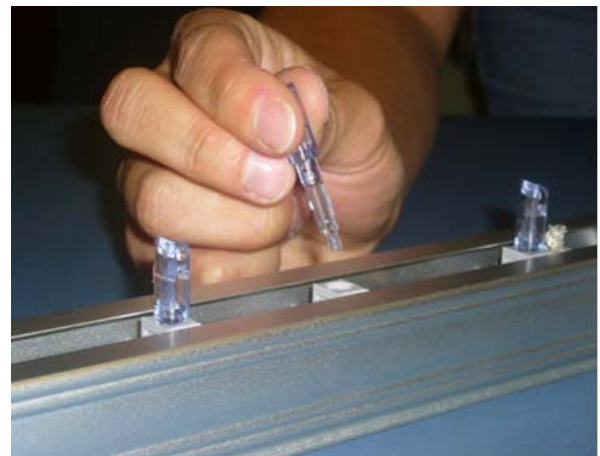


TASK: Replace Louver Stems for G98 Magnum/UltraVue Vertical Headrail


Use If/When: Replace louver stems for G98 Magnum/Ultravue Vertical headrail

Tools Needed: Flat head screwdriver, needle nose pliers, scissors


9. Position gear in the carriage body.

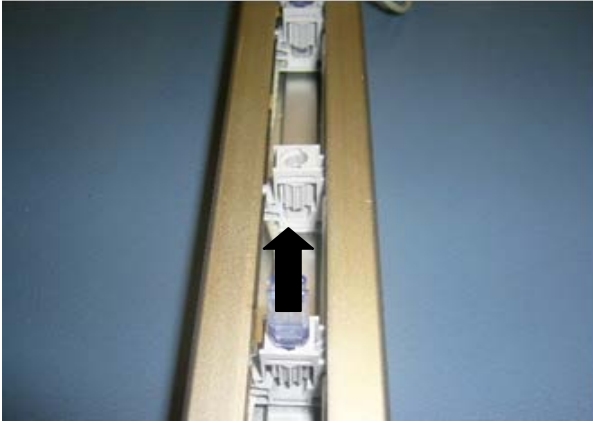


10. Snap new stem into place.

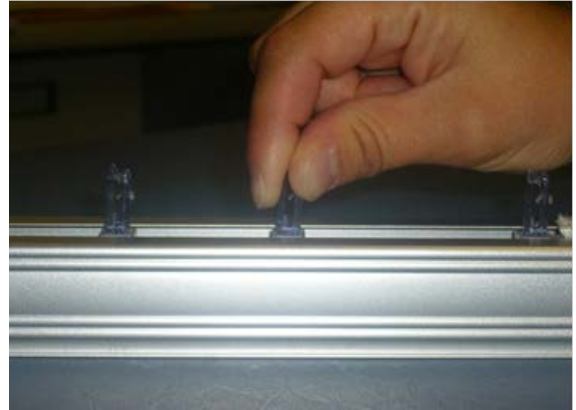

11. Pull chain several times to insure the louver stems rotate correctly.

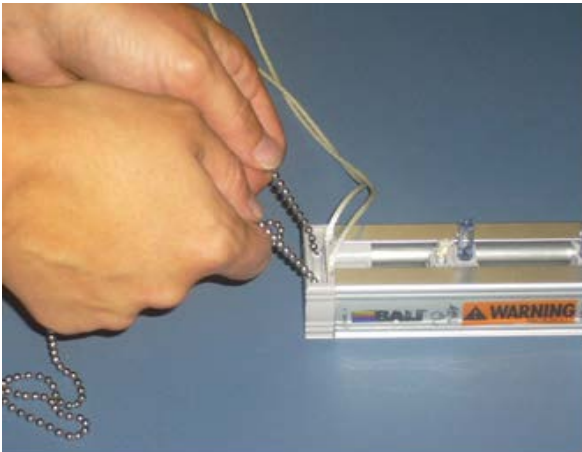

12. If stems are moving out of sync, hold rotation chain stationary while turning stems counter clockwise by hand.

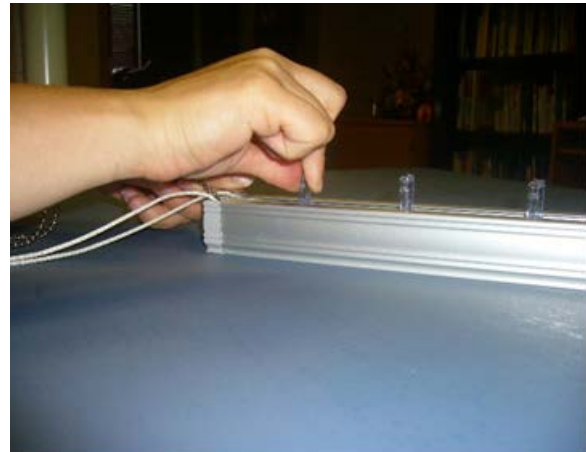


TASK: Replace Louver Stems for G98 Magnum/UltraVue Vertical Headrail

Use If/When: Replace louver stems for G98 Magnum/Ultravue Vertical headrail

Tools Needed: Flat head screwdriver, needle nose pliers, scissors

13. The G98 Magnum/UltraVue has self-aligning carriers that can be engaged by pulling the rotation chain fully in both directions. The chain will need to be pulled until clicking can be heard and when the stems are turned back to the open position and they are all aligned together.

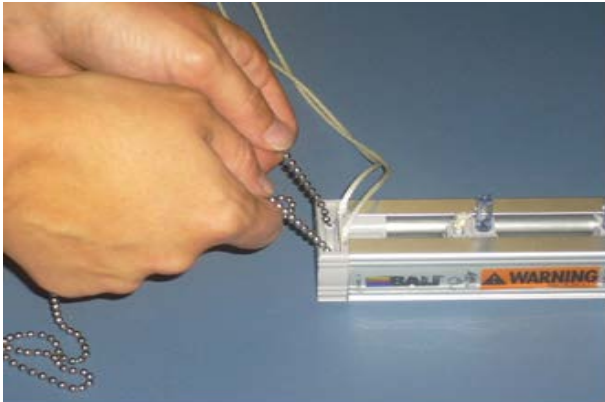

14. Once the headrail is operating properly, reinstall the headrail into the mounting clips and rehang the louvers in the open position. All louvers should be in the same position.

